



REMOVABLE HOOK KNIFE POCKET INSTALLATION



ENGINEERING DEPARTMENT

1645 LEXINGTON AVENUE ♦ DELAND FL 32724-2106 ♦ TELEPHONE +1 386 736 7589 ♦ FAX +1 386 734 7537

UPT@UPTVECTOR.COM ♦ WWW.UPTVECTOR.COM

REMOVABLE HOOK KNIFE POCKET INSTALLATION

Step 1



Identify the leg straps and choose which side to install the removable pocket.

Left or right sides will vary depending on wearer's preference and the procedure is the same for either side.

Step 2



Unthread the leg strap and identify the buckle pad.

Step 3



Rotate the hardware 90° in either direction.

Step 4



Flip the buckle pad over so the body contact is facing up.

Do the same for the hook knife pocket.

Step 5



Insert the buckle pad through the TOP loop on the pocket.

Step 5 (cont.)



On the opposite side, make sure the pocket slides over the hardware.

REMOVABLE HOOK KNIFE POCKET INSTALLATION

Step 5 (cont.)



Side view.

Step 6



Keep sliding the pocket up towards the top.

Make sure to thread the hardware through the bottom loop on the pocket.

REMOVABLE HOOK KNIFE POCKET INSTALLATION

Step 7



Slide the pocket all the way up the top of the buckle pad.

Step 7 (cont.)



Make sure the bottom loop on the pocket sits between the type-8 strap and the pad.

Step 8



Rotate the hardware back to its original position.

Step 8 (cont.)




Top view.

Step 9



Thread the leg strap back on through the hardware.

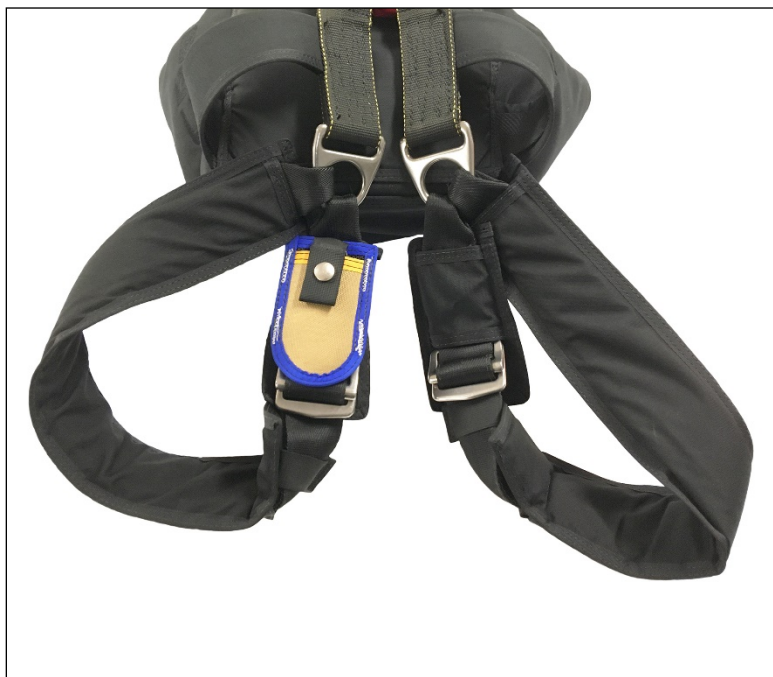

The pocket is in place and ready to be jumped.

REMOVABLE HOOK KNIFE POCKET INSTALLATION